

CLASSE

Sigma SSP Infrared Codes

The Classé Sigma SSP uses RC6 protocol for infrared communications. The following list of infrared codes can be used to program a universal or learning remote control. The Classé Remote Control uses a frequency of 56.0 kHz. Please refer to your remote control's user manual for information on how to program your remote control.

Sys code	IR code	Action
116	2	Change input to input 1
116	3	Change input to input 2
116	4	Change input to input 3
116	5	Change input to input 4
116	6	Change input to input 5
116	7	Change input to input 6
116	8	Change input to input 7
116	9	Change input to input 8
116	10	Go to next input
116	11	Go to previous input
116	12	Toggle Standby/Operate
200	13	Toggle Mute/Unmute
116	14	Info (go to status screen)
116	15	Cycle through display intensities
200	16	Volume up
200	17	Volume down
116	18	Tone
116	19	Late Night Toggle
116	21	Balance (go to balance screen)
200	56	Function key F1
200	57	Function key F2
116	68	DSP Mode Up
116	84	Menu
116	85	Home
116	88	Step up (navigate up, +)
116	89	Step down (navigate down, -)
116	90	Step left (navigate left, front USB prev track)
116	91	Step right (navigate right, front USB next track)
116	92	Enter
116	120	Change input to input 9
116	121	Change input to input 10
116	122	Change input to input 11
116	123	Change input to input 12

Sys code	IR code	Action
116	124	Change input to input 13
116	125	Change input to input 14
116	126	Change input to input 15
116	127	Change input to input 16
116	128	Change input to input 17
116	129	Change input to input 18
200	134	Function key F3
200	135	Function key F4
200	136	Function key F5
200	137	Function key F6
200	138	Function key F7
200	139	Function key F8
116	150	Set unit to Operate (Turn unit on)
116	151	Set unit to Standby (Turn unit off)
200	152	Set Mute mode on (Mute)
200	153	Set Mute mode off (Unmute)
116	160	Late Night On
116	161	Late Night Off
116	167	DSP Mode Down
116	185	Configuration 1
116	186	Configuration 2
116	187	Configuration 3
116	188	Configuration 4
116	189	Configuration 5
116	190	Configuration 6
116	206	Go to next Configuration
116	207	Go to previous Configuration
116	214	Front USB Play/Pause
116	216	Dolby Volume Toggle
116	217	Access Lipsync menu page
116	220	Mode01: Mono
116	221	Mode02: Stereo
116	222	Mode03: Party
116	223	Mode04: Mono Plus
116	224	Mode05: Movie Plus
116	225	Mode06: Music Plus
116	226	Mode07: PLII
116	227	Mode08: PLIIz Music
116	228	Mode09: PLIIz Movie
116	229	Mode10: PLIIz Matrix
116	230	Mode11: PLIIz Game
116	231	Mode12: DTS Neo6
116	232	Mode13: DTS Neo6 Music
116	233	Mode14: DTS Neo6 Cinema

Sys code	IR code	Action
116	234	Mode15: Discrete
116	235	Mode16: Dolby EX
116	236	Mode17: DTS Neo6 Music ES
116	237	Mode18: DTS Neo6 Cinema ES
116	247	Go to EQ Menu