

## **Classe CA-D200, Sigma AMP2, AMP5 and Mono Serial commands**

PWR - Power toggle

PW0 - Direct Power Off

PW1 - Direct Power On

DIM - Steps through LED brightness settings

LDD - Direct set LED brightness

WoLx - Wake on LAN setting (x = 1 for on, x = 0 for off)

ggm - Returns the current Green or WoL setting.

gas - Returns the current Auto Standby State.

NASx - Auto Standby setting (x = 0 for on, x = 1 for off)

fac - Returns the model and serial number information

AMX - sends the AMX beacon

RFF - Clears fault.

VERS - Returns the firmware version